


AIR SCREWDRIVER

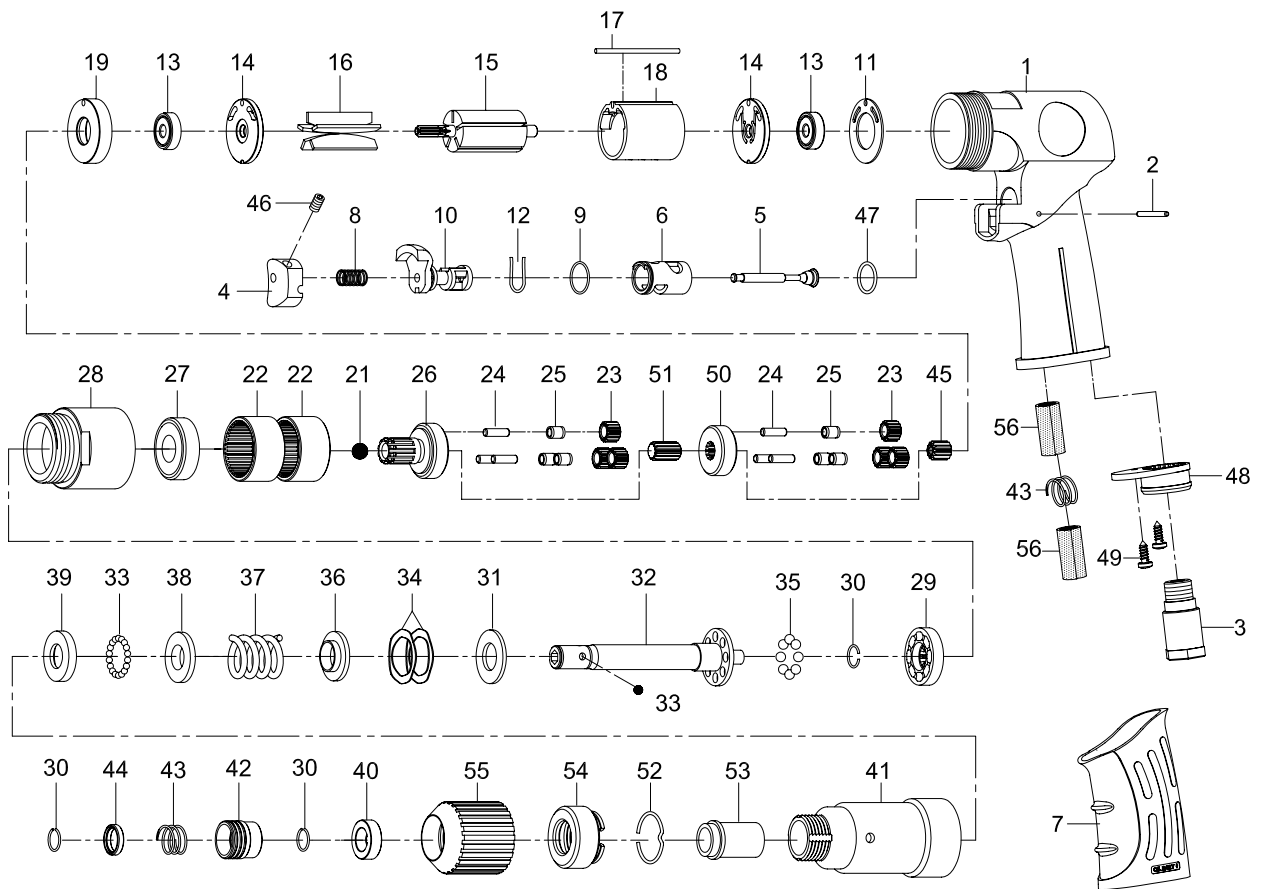

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	822501	Motor Housing	29	88329	Drive Dog
2	82202	Spring Pin (Ø2.5*25.8L)	30	80230	Retaining Ring (3)
3	70103	Air Inlet	31	88331	Washer
4	82204	Trigger	32	88332	Cam Spinidle
5	82205-12SUB	Valve Stem Set	33	40145	Steel Ball (18) (1/8")
6	82206	Reverse Bushing	34	88334	Wave Washer (2) (WW-14)
7	751152	Rubber Grip	35	88335	Steel Ball (8) (Ø5)
8	82208	Valve Spring	36	88336	Thrust Washer
9	82209	O-Ring (Ø14*Ø1)	37	88337	Spring
10	82210	Reverse Lever	38	88338	Washer
11	80211	Motor Gasket	39	88339	Adjust Nut
12	82212	Reverse Retainer	40	88340	Spacer
13	030113	Ball Bearing (2) (626ZZ)	41	88341	Clutch Housing
14	80214	End Plate (2)	42	80242	Ball Retainer
15	80215	Rotor	43	80243	Spring (2)
16	80216	Rotor blades (5)	44	80244	Washer
17	80217-13	Spring Pin (Ø2.5*55L)	46	82246-12	Set Screw (M5*8L)
18	80218-22	Cylinder	47	82247	O-Ring (Ø13.5*Ø1.5)
19	80219	Spacer	48	70110	Exhaust Diffuser
21	88321	Steel Ball	49	40309	Screw (2) (TS2.9)
22	80222	Internal Gear	50	70427	Reduction Spindle
23	70423	Planet Gear (6)	51	70421	Center Gear
24	30124	Pin (6) (Ø4*13.8L)	52	88352	Retainer
25	70425	Bushing (6)	53	88353	Bushing
26	88326	Work Spindle	54	88354	Adjustable Screw
27	080227	Ball Bearing (6201Z)	55	88355	Adjustable Knob
28	80328	Clamp Nut	56	70536	Damping Diffuser (2)

9835-0001